



Manual for oil filling

Suggested methods to fill oil in a simalube

Material

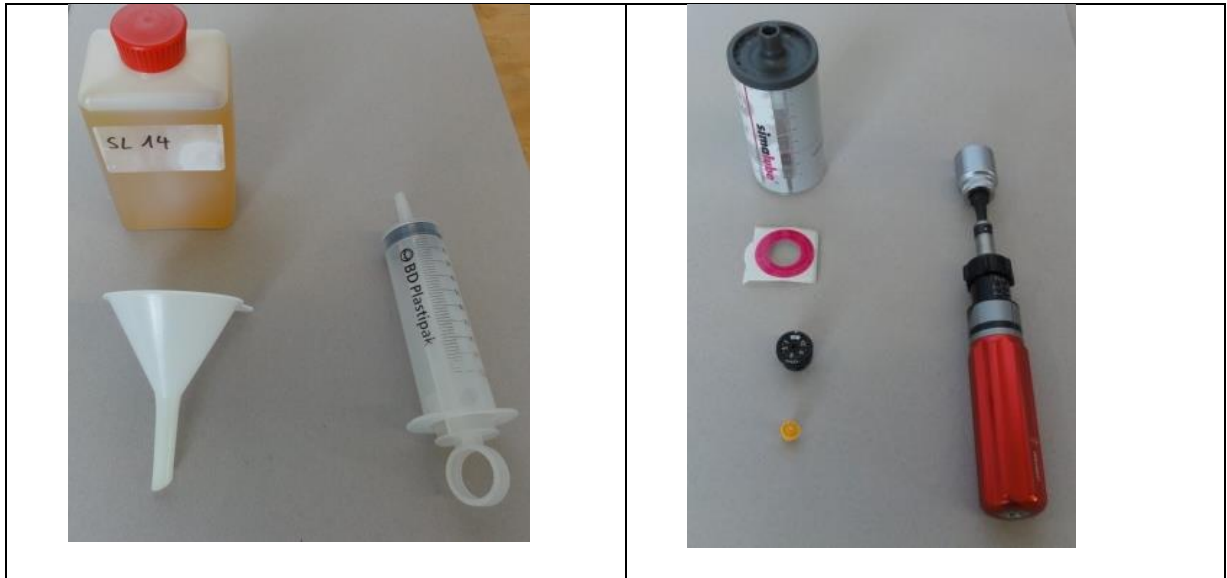

Preparation

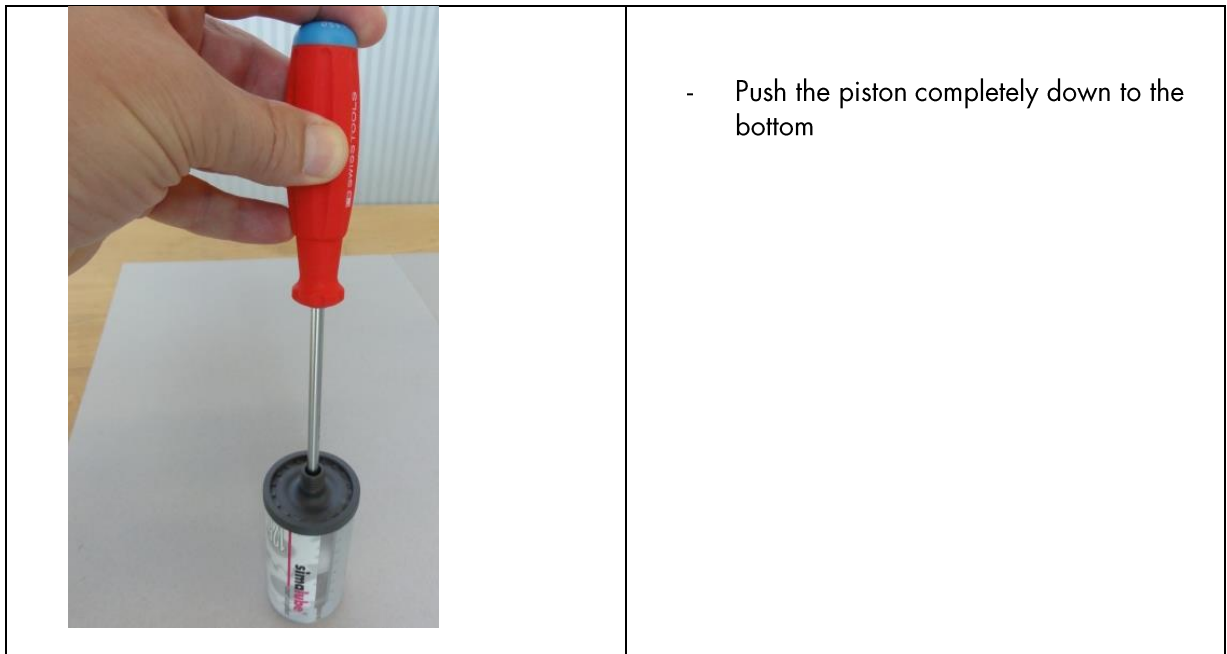

First method: use of a small funnel

	- Place the funnel upon the simalube and slowly fill in the oil - Make sure that the air in the simalube can escape
---	--

Second method: use of an oil syringe

	- Fill up the syringe with oil
	- Fill the empty simalube - Make sure that the air in the simalube can escape

Complete the assembly of the simalube

	- Close the simalube with the yellow plug
	- Screw in the cartridge
	- Tighten the cartridge by using a torque wrench, set on 1.5 Nm
	- Position the washer over the cartridge